

TRAILER INSPECTION, SERVICE & MAINTENANCE SUMMARY CHART

Item + Required Service	Each Use or Weekly	3 Months or 3,000 Miles	6 Months or 6,000 Miles	12 Months or 12,000 Miles
Brake Adjustment: Adjust to proper operating clearance		X		
Brake Controller: Check for correct amperage & modulation			X	
Brake Cylinders: Check for leaks and sticking				X
Brake Lines: Inspect for crack, leaks or kinks				X
Brake Lining: Inspect for wear or contaminate				X
Brake Magnets: Inspect for wear and current draw			X	
Brakes: Test they are operational	X			
Breakaway Battery: Check battery charge and switch operation	X			
Couplers: Inspect for cracks, pits and flats. Check locking device.	X			
Hangers: Inspect wear and welds				X
Hinges, Gates & Ramps: Inspect and repair/ replace if damaged, worn or broken			X	
Hub/Drums: Check for abnormal wear or scoring				X
Safety Chains & Hooks: Inspect for damage or wear	X			
Seals: Inspect for leakage. Replace if removed				X
Springs: Inspect for wear, cracks or loss of arch				X
Structure: Check floor for rot & frame for cracked or broken welds			X	
Suspension: Parts Inspect for bending, loose fasteners, wear			X	
Tire Condition: Inspect for cuts, wear, bulging, etc.		X		
Tire Inflation Pressure: Inflate to manufacture specification	X			